## **HAMPTON**

# 3ATaLI0

## INSTALLATION INSTRUCTIONS FOR **OUTDOOR SECURITY FLOODLIGHTS**








**SERIES 7761** 

SERIES 7762

#### SERIES 7763

### IMPORTANT SAFETY INFORMATION

- TURN POWER OFF AT THE MAIN POWER PANEL OR FUSE BOX BEFORE INSTALLING OR REPLACING THE FIXTURE AND/OR WHEN REPLACING THE BULBS.
- THIS PRODUCT MUST BE INSTALLED IN ACCORDANCE WITH ALL APPLICABLE INSTALLATION CODES BY A PERSON FAMILIAR WITH THE CONSTRUCTION AND OPERATION OF THE PRODUCT AND THE HAZARDS INVOLVED.
- · If you are not familiar with electrical wiring, it is recommended that you secure the services of a qualified electrician who can assure that this installation meets local, state, and national codes.
- Before installing this fixture, be sure to check with local ordinances regarding approved outdoor lighting.
- The electrical system and the method of connecting this fixture to the system must be in accordance with local, state, and national electrical codes.
- This fixture is to be connected to a 120-Volt, 60 Hz power source. Connecting to a different power source may create a hazard and will void the warranty.
- This fixture should be mounted to a grounded junction box marked for use in wet locations.
- This fixture is for outdoor use only.
- Do not use near or around flammable/combustible materials or liquids.
- The bulb and unit can get hot during use. Turn off the power and allow the unit to cool down for at least 20 minutes before working on the unit.
- When replacing the bulb(s), use only a JCD Halogen bulb (100 Watt max) of the same size. Never use a bulb with a higher wattage than the stated maximum wattage allowed for the fixture. Using a higher wattage bulb may cause a fire hazard and/or cause damage to the unit.
- Always handle halogen bulbs with gloves or a soft cloth. NEVER touch the bulb with your bare hands. Oil from your hand may cause the bulb to fracture when illuminated.
- If it becomes necessary to replace the lens, only use a tempered safety glass of equal thickness.
- Do not attempt to open the fixture housing. There are no serviceable parts inside.

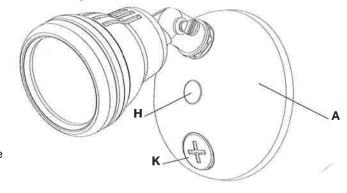

## WHAT'S INCLUDED

- A CREATaLIGHT™ Outdoor Lighting Fixture
- B EZ-N-STALL™ Connector
- C Mounting Bar
- D Mounting Bar Screws (2)
- E Ground Screw
- F Fixture Mounting Screw
- **G** Wire Connectors (3)
- H Fixture Mounting Screw Cover
- J-JCD-100 Watt Halogen Bulb(s) (One bulb per head)
- K CREATaLIGHT™ Accessory Socket Cover

## **TOOLS YOU WILL NEED**

- #2 Phillips Screwdriver
- · Silicone Sealant or Caulk

