

### FEATURES

- 6 grounded socket outlet, for use 3-wire plugs & outlets
- Turns appliance on and off as per your setting.
- Programmable in 30 minutes intervals
- Max. 24 ON/OFFs per day
- Durable rain cover for outdoor use
- With overload protection
- Cable: SJTW, 14AWG UL approved PVC cable, 1.64 ft (50 cm)

### PROGRAM SETTING

- When the timer is plugged in the timer's dial will turn clockwise. The arrow on the face of the dial points to the current time of day.


NOTE: The dark area on the dial denotes nighttime hours (☾). The white area denotes daytime hours (☀).

- The timer comes with all pins in the down position. On this model, up represents "OFF" and down represents "ON". Be sure all pins are pulled up before programming. Select a time period (or periods) you want the lights turned on, then push down ALL the pins that fall on or within that time period. Each pin represents 30 minutes with 2 pins representing 1 hour. For example, to have the timer turn lights on at 10 PM and off at 2 AM, push down the pins representing 10 PM and 2 AM, and ALL the pins in between. See Figure 1. You may need to turn the dial clockwise to access the desired pins.


Figure 1 shows timer set to turn lights ON at 10 PM and OFF at 2 AM. Notice ALL pins between 10 PM and 2 AM have been pushed down. Current time is 12:00 AM.

NOTE: All 6 outlets controlled by timer.

FIGURE 1

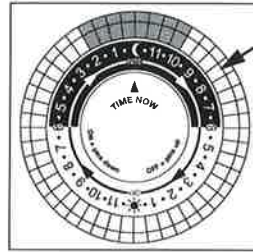

Scan QR code for more information on "How To Use".

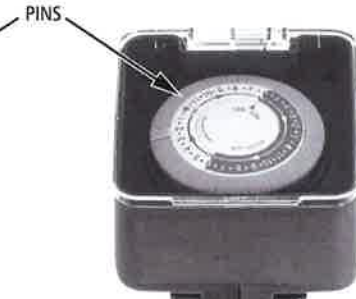

### CAUTIONS

This Outdoor Stake Timer must be plugged into a grounded, outdoor rated outlet that meets local, state, and national safety codes. If you are not familiar with the safety rating of your outlet, it is recommended that you secure the services of a well qualified electrician who can assure the outlet meets the local, state, and national safety regulations required.

- Connect Outdoor Stake Timer to a 120 volt, 60 Hz power source only. Connecting to a different power source may create a hazard and will void the warranty.
- Ground Fault Circuit Interrupter (GFCI) protection is required on the circuit or outlet used for this Outdoor Stake Timer.
- To prevent electric shock, match wide blade of plug to wide slot of outlet.
- Do not attempt to open Outdoor Stake Timer housing. There are no serviceable parts inside.
- Risk of electric shock:
  - Keep away from children
  - Do not splice, repair or modify cord set
  - Unplug timer before cleaning or setting the program
  - Do not use damaged cord set
  - Plug only into a GFCI protected receptacle
  - Do not expose directly to water
  - Fully insert plug
  - Not for permanent installation
- **CAUTION: Risk of fire.**
  - Do not use to control appliances that contain heating elements (cooking appliances, heaters, irons, etc.)
  - Do not exceed the specified electrical rating
  - Not for permanent installation. Use only with outdoor equipment, Christmas tree, or other seasonal decorative lighting products having a total of 12 Ampere maximum. Do not install or use this product for more than a 90-day period.
  - If using Christmas tree or decorative lighting products that are not marked with an ampere rating, connect no more than 140 screw-base lamps (C7 or C9) or 12 strings with midget (push-in) lamps to this cord set.
  - Cord sets shall be plugged into GFCI-protected receptacle.
  - If using an outdoor-use cord set for an extended period of time (greater than 90 days) please consider hard wiring a permanent outdoor use receptacle rated for year-round use in the area that power is needed. Please contact a licensed electrician for proper installation of permanent wiring.
  - After completion of installation, the connector shall be maintained a minimum of 6 inches above ground.

- For temporary outdoor installation and use – Not to exceed 90 days

### SPECIFICATIONS

125Vac, 60Hz, 15A General purpose /resistive/tungsten, 1/2HP