

FEATURES

- 2 Timer controlled grounded outlets
- Weekly / 7 Day programming.
- Countdown feature.
- Invisi-Shield cover.
- Manual Override and Always ON feature.
- Up to 16 ON/OFFs per day.
- Random ON/OFF setting.
- 125VAC/60Hz 15A, 1875W Resistive.

WARNINGS

The electrical system and the method of connecting this timer to the system must be in accordance with local, state, and national electric codes.

- This unit is to be connected to a 125V, 60Hz power source only.
- Total Capacity: 15A 1875W Resistive, 1250W Tungsten (Lighting). 1/2 HP. Do not exceed rated capacity.
- FOR INDOOR USE ONLY.
- Do not attempt to disassemble unit. There are no serviceable parts inside.
- Unplug when not in use.

- **RISK OF ELECTRIC SHOCK:**
 - o Keep children away.
 - o Unplug timer before cleaning.
 - o Do not use in wet locations.
- **RISK OF FIRE:** Do not use to control appliances that contain heating elements (Cooking appliances, heaters, irons, etc...)
- PLEASE READ THROUGH THE INSTRUCTIONS PRIOR TO USE.

CAUTIONS

- Do not use with any appliance which exceeds the capacity of the Timer.
- Always ensure that the plug of any appliance is fully inserted into the Timer.
- If you need to clean the Timer, remove from the power source and wipe with a dry cloth. Do not immerse in water or any liquid.
- Fan heaters and heaters with exposed elements should not be left unattended, and it is recommended that these type of appliances are not to be connected to timers.

INSTRUCTIONS

CURRENT TIME SETTING

1. Press and hold the **OK** button for 4 seconds. Day Display flashes.
2. Press **+ / Manual** or **-** to select the day. Press **OK** to confirm.
3. Hour display will flash. Press **+ / Manual** or **-** to select the hour. Press **OK** to confirm.
4. Minute display will now flash. Press **+ / Manual** or **-** to select the minute. Press **OK** to confirm.
5. Press **MENU** to exit the time setting mode. Now the timer is in clock mode.

PROGRAM SETTING

- NOTE: This timer can be set up for up to 16 different programs. We will use PROG 1 for this example, however these steps can be repeated for any of the 16 programs. To cycle through the individual programs use the **+ / Manual** or **-** after pressing **MENU** in step one until the desired PROG "#" is flashing.

1. Press **MENU** button, PROG 1 "ON" will flash, press **OK**.
2. Days will flash. Cycle through possible day settings with **+ / Manual** or **-**, press **OK** on desired setting.
3. Hour will flash. Cycle with **+ / Manual** or **-** to desired hour, press **OK**.
4. Minutes will flash. Cycle through minutes **+ / Manual** or **-** to desired minute, press **OK**.
5. Program will be flashing again. Press **+ / Manual** to get to PROG 1 "OFF" blinking, press **OK**.
6. Repeat steps 2-4 to complete PROG 1 setting.
7. When done setting programs press the **MENU** button twice to return to clock mode.

COUNTDOWN SETTING

1. Under clock mode press **MENU** twice, or under program setting mode press **MENU** once. Enter countdown setting. (Press **MENU** once again to return the clockmode) LCD shows flashing CTD setting range 00:00:00 ~ 99:59:59
2. "Hour" flashes. Press **+ / Manual** or **-** to choose the "hour". Press **OK** to confirm.
3. "Minute" flashes. Press **+ / Manual** or **-** to choose the "minute". Press **OK** to confirm.
4. "Second" flashes. Press **+ / Manual** or **-** to choose the "second". Press **OK** to confirm.
5. Countdown function starts. CTD will flash.
6. Two countdown functions:
 - Power OFF countdown. Under ON or AUTO ON mode, enter Countdown function. This timer will switch to ON mode automatically. When countdown finishes, power to appliance will turn OFF.
 - Power ON countdown. Under OFF or AUTO OFF mode, enter Countdown function. This timer will switch to OFF mode automatically. When countdown finishes, power to appliance will come ON.
 - o Under countdown mode, pressing **Recall** will stop countdown and return to countdown setting, press **MENU** once more to return to clock mode.
 - o Under countdown mode, press **MENU** once to return to clock mode. Countdown function is still running.

RANDOM (RND) SETTING

1. Under clock mode, press **-** to active the random function, Display shows RND.
2. Under random mode, the set on and off times (programs from 1-16) will be delayed 4-32 minutes
3. Press **-** to recall the random function. No RND will be shown on LCD.

NOTE: When RND under running, the delay cannot change by program, but randomly.

DAYLIGHT SAVING TIME SETTING (DLST)

1. In clock mode, press **Recall** to turn on or off the Daylight Saving Time.
2. Turn on DLST, the below of LCD shows +1H. Time is adjusted by adding one hour.
3. Turn off DLST, +1H will disappear and LCD shows the real time.

MANUAL OVERRIDE AND ALWAYS ON/OFF

When in clock mode the **+ / Manual** sign cycles through 4 settings that serve as manual override and always on/off. Note that the "Auto" indicator at the bottom left of the LCD screen indicates if the timer will function according to it's programs. If it is on the timer will be functioning, if it is off it will not function. The On/Off indicators on the bottom of the LCD screen indicate whether the timer is currently supplying power to the appliance. When cycling through these features the sequence will repeat as: Off, Auto Off, On, Auto On.

RESET

At any mode, press **Reset** for 5 seconds. All settings will be cleared, return to clock mode, 12:00 MO, AM, AUTO OFF will be shown on LCD.

FULL LIFETIME WARRANTY

This product is fully warranted to be free of defects in material and workmanship for the life of the product. If a defect in material or workmanship occurs, call 800-562-5625 for instructions on how to have it replaced or repaired free of charge. This warranty is null and void if the product was used for purposes for which it was not designed, is abused, misused, modified or improperly installed, operated, maintained, and/or repaired. NOT LIABLE FOR INCIDENTAL, INDIRECT, OR CONSEQUENTIAL DAMAGES. Some states do not allow the exclusion or limitation of incidental or consequential damages, so the above limitation or exclusion may not apply to you. This warranty gives you specific rights, and you may also have other rights that vary from state to state.

Hampton Products International Corp.
50 Icon, Foothill Ranch, CA 92610-3000 USA
www.hamptonproducts.com 1-800-562-5625

Brink's trademark & copyright work are used with permission.

Made in China
© 2012 Hampton Products International Corp.
999-60980_44-1041_REVA 6/12



LCD



BUTTON FUNCTIONS

+ / Manual	In clock mode, press to change output to ON, OFF. In program and time setting mode, press to change channel and time in ascending order.
-	In program setting and time setting mode, press to change channel and time in descending order. In clock mode, press to enter or exit random function.
MENU	Press to enter or exit programming.
OK	Press to confirm selected setting. Press and hold for 4 seconds to enter the time setting mode.
Recall	In clock mode, press to turn on or off the DLST Time function. Clears the program under setting. In CTD mode, press to stop countdown function, return to CTD setting mode.
Reset	Press and hold for a few seconds to clear all settings, clock mode is restored as 00:00