

## MECHANICAL TIMER

### WARNINGS:

- The unit is to be connected to a 120V, 60Hz power source only.
- Capacity: 15A, 1875 W Resistive (General Purpose); 10A, 1250 W Tungsten (Lighting).
- **Do Not Exceed Capacity.**
- Do not attempt to disassemble the unit. There are no serviceable parts inside.
- The timer is for indoor use only.
- **PLEASE READ THROUGH THE INSTRUCTIONS BEFORE USING.**

### INSTRUCTIONS:


- Turn the dial (1) clockwise until the current time lines up with the "Time Mark" (2).
- Rotate the green "ON" tab (3) around the dial to the desired time for the power to be turned ON.
- Rotate the red "OFF" tab (4) around the dial to the desired time for the power to be turned OFF.
- Connect appliance to the timer and plug timer into a wall socket for power source. Turn the appliance on.

### ON/OFF SWITCH:

- Temporary manual override of the programmed times is possible by turning the "ON/OFF" dial (5) to the right until the opposite setting is displayed. (For example, rotate the "ON/OFF" dial (5) to turn the power to OFF when the timer is programmed to be on.)
- Manual override will not deactivate future programmed actions. (For example, If you turn the power OFF early, the timer will turn ON again at the next programmed setting.)

### NOTE:

- Program repeats every 24 hours
- Timer is based on a 12 hour timing format. There are AM and PM hours on the dial.

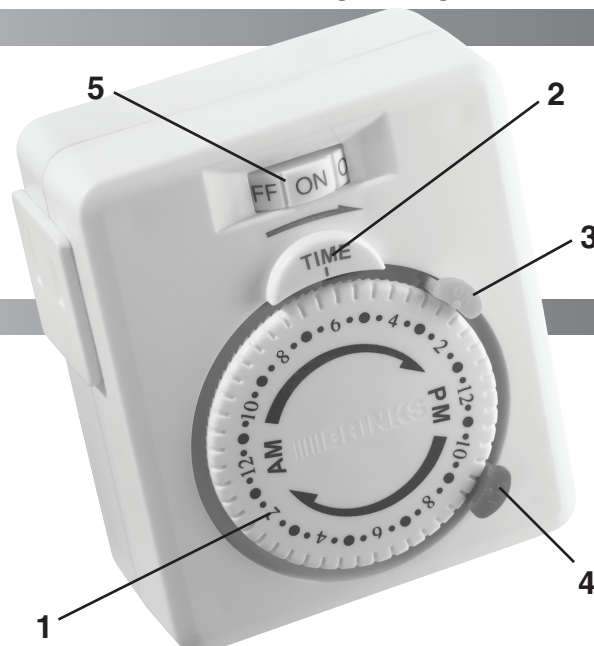

### WARRANTY

This product is warranted to be free from defects in material and workmanship for the life of the product. If a defect in material or workmanship occurs, call 1-800-562-5625 for instructions on how to have the defective product repaired or replaced free of charge.

#### LIMITATIONS

- This warranty only covers the timer unit and is not extended to other components or equipment that is used in conjunction with the product.
- This warranty is extended to the original purchaser of the product. A purchase receipt or other approved proof of purchase is required before warranty service will be rendered.
- Unauthorized service or modification to this product or any furnished component will void the warranty in its entirety.
- THIS WARRANTY IS EXPRESSLY IN LIEU OF ALL OTHER WARRANTIES, EXPRESSED OR IMPLIED, INCLUDING ANY PARTICULAR PURPOSE OR USE, AND SPECIFICALLY IN LIEU OF ALL SPECIAL, INDIRECT, INCIDENTAL, OR CONSEQUENTIAL DAMAGES (INCLUDING BUT NOT LIMITED TO ANY LOSS OF BUSINESS OR PROFITS, WHETHER OR NOT FORESEEABLE) RESULTING FROM THE USE OF THE PRODUCT OR ARISING OUT OF ANY BREACH OF THIS WARRANTY.
- Some states or provinces do not allow the exclusion of incidental or consequential damages, so the above limitation or exclusion may not apply.
- This warranty gives you specific rights, and you may also have other rights that vary from state to state.

#### NOT COVERED

- Failure of the product as a result of an accident, abuse, negligence, alteration, or faulty installation, or any other failure not relating to faulty material or workmanship.
- Damaged caused by electronic equipment plugged into the timer.
- Reimbursement for inconvenience, installation, setup time, loss of use, or unauthorized service.
- Special, indirect, incidental or consequential damages.