


INSTALLING OR REPLACING BULB / INSTALLATION OU REMPLACEMENT D'UNE AMPOULE / PARA INSTALAR O REEMPLAZAR EL FOCO/BOMBILLA


WARNING: TURN OFF POWER AND ALLOW FIXTURE TO COOL DOWN FOR 20 MINUTES. USE ONLY A T3 HALOGEN BULB OF THE SAME SIZE. ONLY HANDLE BULB WITH GLOVES OR A SOFT CLOTH. DO NOT TOUCH BULB WITH YOUR BARE HANDS. AVERTISSEMENT : ÉTEINDRE LE PROJECTEUR ET LE LAISSER REFROIDIR PENDANT 20 MINUTES. N'UTILISER QU'UNE AMPOULE HALOGÈNE T3 DE LA MÊME TAILLE. TOUJOURS UTILISER DES GANTS OU UN TISSU DOUX POUR MANIPULER L'AMPOULE. NE JAMAIS TOUCHER L'AMPOULE À MAINS NUES. ADVERTENCIA: DESCONECTE LA ALIMENTACIÓN ELÉCTRICA Y PERMITA QUE SE ENFRÍE EL DISPOSITIVO DURANTE 20 MINUTOS. USE ÚNICAMENTE UN FOCO/BOMBILLA HALÓGENO T3 DEL MISMO TAMAÑO. SOSTENGA EL FOCO/BOMBILLA ÚNICAMENTE CON GUANTES O CON UN TRAPO SUAVE. NO TOQUE EL FOCO/BOMBILLA CON SUS MANOS DESNUDAS.

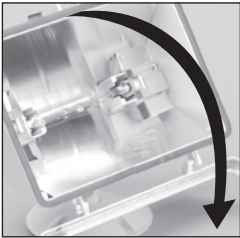

Open the lens cover by unscrewing the top screw of the floodlight and swinging it downward.

Ouvrir le verre de protection en le faisant pivoter vers le bas après avoir dévissé la vis sur le dessus du projecteur.


Abra la cubierta de la lente al desatornillar el tornillo superior del reflector y girándola hacia abajo.

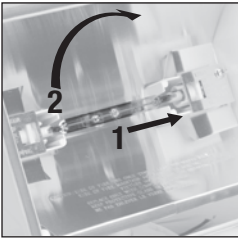

Remove the old bulb (if any) by (1) shifting the bulb to the right until the left end of the bulb is clear of the left socket then (2) lift out. Dispose of the old bulb properly according to local ordinances.

Enlever l'ampoule usagée s'il y en a une (1) en poussant l'ampoule vers la droite pour dégager le culot de la douille de gauche puis (2) en la soulevant. Jeter ou recycler l'ampoule usagée selon les lois qui s'appliquent.

Quite el foco viejo (si corresponde) mediante (1) el desplazamiento del foco hacia la derecha hasta que el extremo izquierdo del foco libra el receptáculo izquierdo y luego (2) sáquelo. Deseche el foco viejo de manera apropiada de acuerdo con los reglamentos locales.

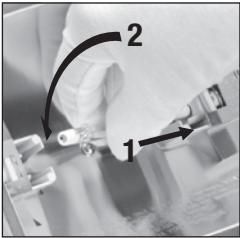

(1) Insert the new bulb into the right socket, then (2) seat the left end of the bulb firmly into the left socket. Swing the lens cover back into position and secure the screw at the top of the floodlight.

(1) Insérer la nouvelle ampoule dans la douille de droite puis (2) mettre en place fermement le culot de gauche dans sa douille. Remettre en place le verre de protection et revisser la vis sur le dessus du projecteur.

(1) Inserte el nuevo foco en el receptáculo derecho y luego (2) asiente el extremo izquierdo del foco firmemente en el receptáculo izquierdo. Gire la cubierta de la lente otra vez a su posición original y atornille el tornillo en la parte superior del reflector.

TROUBLESHOOTING	
SYMPTOM Does not function at all.	REMEDY Make sure wall switch (if installed), is ON. Check that the circuit breaker, fuse and main circuit breaker or main power switch are on. Be sure sensor head is pointed downward towards the target area. Check the bulb(s) for damage.
Floodlight cycles ON and OFF.	Redirect security floodlight away from heat sources such as a street, active sidewalk, barbecue grill, etc. Direct floodlight in a slightly different direction than sensor. Turn RANGE (Sensor sensitivity) control more counterclockwise.
Floodlight is continuously ON.	Turn wall switch OFF for at least 5 seconds and then turn switch to ON again. This will reset the fixture to normal (automatic) operations. If there is no wall switch, set circuit breaker OFF for at least 5 seconds and then turn circuit breaker ON again.

DÉPANNAGE	
SYMPTÔME Aucun fonctionnement.	SOLUTION Vérifier, le cas échéant, que l'interrupteur mural est allumé (ON). Vérifier que le disjoncteur ou l'interrupteur principal sont bien enclenchés (ne coupent pas le circuit) (ON). Vérifier que la tête du capteur de mouvement est orientée vers le bas et en direction de la zone ciblée. Vérifier que les ampoules ne sont pas grillées. Réorienter le projecteur loin de sources de chaleur telles que la rue, un trottoir fréquenté, un barbecue, etc. Orienter le projecteur dans une direction sensiblement différente de celle du capteur.
Le projecteur passe continuellement du mode allumé (ON) au mode éteint (OFF).	Réorienter le projecteur loin de sources de chaleur telles que la rue, un trottoir fréquenté, un barbecue, etc. Tourner la commande RANGE (Portée) (sensibilité du capteur de mouvement) plus à fond en sens inverse des aiguilles d'une montre.
Le projecteur est continuellement allumé (ON).	Tourner l'interrupteur mural sur la position OFF (éteint) pendant au moins 5 secondes puis le rallumer de nouveau (ON). Cela ré-établit le mode de fonctionnement normal (automatique) de l'appareil. En l'absence d'interrupteur mural, déclencher (ouvrir) le coupe-circuit ou le disjoncteur (OFF/Arrêt) pendant au moins cinq (5) secondes puis le réenclencher (remise à nouveau sur ON) (Marche).

LOCALIZACIÓN DE AVERÍAS	
SÍNTOMA No funciona.	REMEDIO Asegúrese que el interruptor de pared (si se tiene instalado) está en la posición de encendido (en "ON"). Verifique que el disyuntor de circuito o el interruptor principal de alimentación están conectados. Asegúrese que el cabezal del detector está apuntando hacia abajo hacia el área de detección deseada. Revise si los reflectores están dañados.
La lámpara con reflectores cicla de encendido (en "ON") a apagado (en "OFF").	Cambie la dirección de la lámpara con reflector para alejarla de las fuentes de calor tales como la calle, una acera activa, un asador de carnes, etc. Dirija los reflectores en una dirección algo diferente de la dirección del detector. Gire el control de GAMA o "RANGE" (sensibilidad del detector) más en dirección opuesta a las manecillas del reloj.
La lámpara con reflectores permanece encendida (en "ON") todo el tiempo.	Coloque el interruptor de pared en apagado (en "OFF") durante cuando menos cinco (5) segundos y luego vuelva a colocarlo en encendido (en "ON"). Esto restaurará el dispositivo a funcionamiento normal (automático). Si no se tiene un interruptor de pared, desconecte el disyuntor de circuito (en "OFF") durante cuando menos cinco (5) segundos y luego vuelva a conectar el disyuntor de circuito (en "ON").

QUESTIONS: For further assistance or more information, please call 1-800-562-5625, 8 am – 5 pm (Pacific Time), Monday – Friday.
QUESTIONS: Pour de plus amples renseignements ou plus d'aide, veuillez composer le 1-800-562-5625, de 8 h à 17 h (fuseau horaire du Pacifique aux USA), du lundi au vendredi.
PREGUNTAS; Para mayor atención o más información, sírvase llamar al teléfono 1-800-562-5625, de lunes a viernes de las 8:00 a las 17:00 horas (8:00 a.m. a 5:00 p.m.) (Hora del Pacífico).

LIMITED LIFETIME WARRANTY – This product is warranted to be free from defects in material and workmanship for life of product. If a defect occurs, call 1-800-562-5625 for instructions on how to have defective product repaired or replaced free of charge. **LIMITATIONS** - This warranty only covers Brink's assembled lighting products and accessories and is not extended to other components, Lamp Bulb(s), or equipment used on the product. Warranty extends to original purchaser of product. Receipt or other approved proof of purchase required for warranty service. **NOT LIABLE FOR INCIDENTAL, INDIRECT, OR CONSEQUENTIAL DAMAGES.** Some states do not allow the exclusion or limitation of incidental or consequential damages, so the above limitation or exclusion may not apply to you. This warranty gives you specific legal rights, and you may also have other rights which vary from state to state. **NOT COVERED** - Product failure not relating to faulty material or workmanship, corrosion of brass components, reimbursement for installation or unauthorized service.
GARANTIE À VIE LIMITÉE –Ce produit est garanti comme étant dépourvu de vices de fabrication et de main d'œuvre pour toute la durée de service du produit. Si un tel vice se manifeste, composer le 1-800-562-5625 pour obtenir les instructions permettant de faire réparer ou de remplacer gratuitement le produit. **LIMITES** - Cette garantie ne couvre que les appareils d'éclairage et les accessoires assemblés par Brink's et ne s'étend à aucun autre composant, ampoule électrique ou équipement utilisé sur le produit. La garantie est accordée à l'acheteur d'origine du produit. Un reçu de caisse ou autre preuve d'achat approuvée est requise avant que le service de garantie ne puisse être mis en jeu. **NOTRE RESPONSABILITÉ NE PEUT ÊTRE MISE EN JEU POUR DES DOMMAGES INDIRECTS QUELS QU'ILS SOIENT.** Certains états ou provinces ne permettent pas l'exclusion des dommages indirects et il est possible que les limites ou l'exclusion ci-dessus ne vous soient pas applicables. Cette garantie vous confère des droits spécifiques et il est possible que vous déteniez d'autres droits variant d'un état ou d'une province à l'autre. **ÉLÉMENTS NON COUVERTS PAR LA GARANTIE** - Les défaillances du produit ne résultant pas d'une défaillance liée à un vice de fabrication ou de main d'œuvre, à la corrosion des composants en laiton, au remboursement d'une installation ou à des réparations non autorisées.
GARANTÍA LIMITADA DE POR VIDA - Se garantiza que este producto está libre de defectos en materiales y mano de obra durante la vida de servicio del producto. Si se encuentra un defecto en los materiales o en la mano de obra, llame al 1-800-562-5625 para recibir instrucciones sobre cómo repararlo o reemplazarlo sin cargo alguno. **LIMITACIONES** - Esta garantía únicamente cubre productos y accesorios de iluminación ensamblados de Brink's y no se extiende a otros componentes, focos o bombillas o equipos utilizados en este producto. Se requiere la presentación de un recibo de compra u otra prueba de compra aprobada antes de la prestación del servicio bajo la garantía. **NO HAY RESPONSABILIDAD ALGUNA POR DAÑOS INCIDENTALES O INDIRECTOS.** Algunos estados o provincias no permiten la exclusión de daños indirectos o emergentes, por lo que la anterior limitación o exclusión puede no ser aplicable. Esta garantía le otorga derechos específicos, y usted podrá tener otros derechos que varían de estado a estado. **SIN COBERTURA** - La falla del producto no relacionada con materiales o mano de obra defectuosos; el reembolso por la instalación o servicio no autorizado.

Brink's trademark & copyright work are used with permission.
La marque de commerce et les droits d'auteur Brink's pour les cadenas sont utilisés avec permission.
La marca comercial y los derechos de reproducción de Brink's se usan con autorización.


Hampton Products International Corp.
50 Icon, Foothill Ranch, CA 92610-3000 USA
www.hamptonproducts.com • 1-800-562-5625

Made in China, Fabriqué en Chine, Hecho en China
© 2010 Hampton Products International Corp.
999-00034_REVb 10/10

BRINKS™

MOUNTING HARDWARE INCLUDED:


- A - Mounting Screw (2)
- B - Wire Connectors (3)
- C - Mounting Crossbar
- D - Fixture Screw
- E - Gasket
- F - Rubber Hole Plug

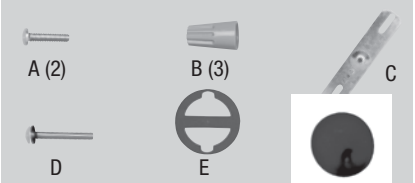


IMPORTANT SAFETY INFORMATION
• IF YOU ARE NOT FAMILIAR WITH ELECTRICAL WIRING, IT IS RECOMMENDED THAT YOU SECURE THE SERVICES OF A QUALIFIED ELECTRICIAN WHO CAN ASSURE THAT THIS INSTALLATION MEETS LOCAL, STATE, AND NATIONAL CODES.
• BE SURE POWER IS TURNED OFF AT THE MAIN POWER PANEL OR FUSE BOX BEFORE INSTALLING OR REPLACING THE FIXTURE.
• Before installing this fixture, be sure to check with local ordinances regarding approved outdoor lighting. This fixture style may not be allowed in some areas.
• This fixture is for outdoor use only.
• The electrical system and the method of connecting the fixture to the system must be in accordance with local, state, and national electrical codes.
• This fixture is to be connected to a 120 Volts, 60 Hz power source. Connecting to a different power source may create a hazard and will void the warranty.
• This fixture should be mounted to a grounded junction box marked for use in wet locations.
• Do not use near or around flammable/combustible material or liquids.
• The bulb and fixture can get extremely hot during use. Turn off the power and allow the fixture to cool down for at least 20 minutes before working on the unit.
• When replacing the bulb, use only a T3 halogen bulb of the same size. Never use a bulb with a higher wattage than the stated maximum allowed on the fixture.
• Using a higher wattage bulb may cause a fire hazard and/or damage to the unit.
• Always handle halogen bulbs with gloves or a soft cloth. NEVER touch the bulb with bare hands, oil from skin may cause the bulb to fracture when illuminated.
• For maximum bulb life, the light should be positioned so that the halogen bulb is horizontal (within 2 degrees).
• If it becomes necessary to replace the lens, only use a tempered safety glass of equal thickness.
• Do not attempt to open the motion sensor housing. There are no serviceable parts inside.
• Performance may be affected by temperature.

THIS PRODUCT MUST BE INSTALLED IN ACCORDANCE WITH THE APPLICABLE INSTALLATION CODE BY A PERSON FAMILIAR WITH THE CONSTRUCTION AND OPERATION OF THE PRODUCT AND THE HAZARDS INVOLVED.


STEP 1: INSTALLING YOUR NEW SECURITY FLOODLIGHT.
TURN OFF THE POWER AT FUSE/BREAKER BOX.
Remove old lighting fixture. If installing at a new location, contact qualified electrician. For optimal performance, fixture should be mounted on a wall at least 8 feet above ground.

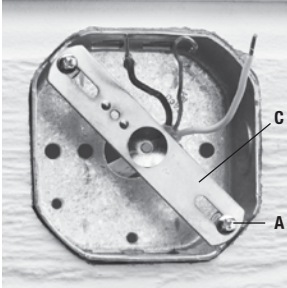

Pull the supply (house) wires over the Mounting Crossbar (C). Install the Mounting Crossbar onto the junction box using the two Mounting Screws (A).

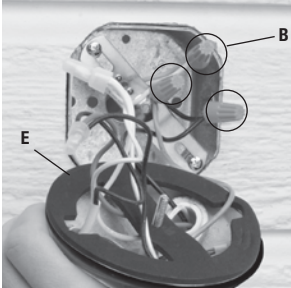

Place round Rubber Gasket (E) onto the backside of the fixture base plate. Connect wires using twist-on wire connectors (B). Connect black fixture lead to black supply lead from junction box. Connect white fixture lead to white (black and white) lead from the junction box. Connect green ground (GND) wires to all green or bare house wires.

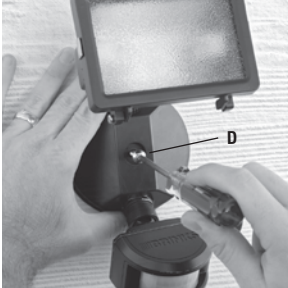

Secure base plate to junction box using the Fixture Screw (D). Press in rubber hole plug (F). Apply a weatherproof silicone caulk or sealant around the fixture base.



Position floodlight to illuminate desired area, but allowing a minimum of 2 inches away from fixture housing, and so that the bulb is horizontal (within 2 degrees). Aim the motion sensor at the center of the desired detection area.
See back page for bulb installation instructions.

STEP 2: MOTION SENSOR CONTROLS
See STEP 3 for more details on setting these controls.




Observe the two controls on the bottom of the sensor. The **RANGE** (sensor sensitivity) control is located on the bottom left. The **ON-TIME** (duration) switch is located on the bottom center.



RANGE (Sensor Sensitivity)

Sets the sensitivity of the motion sensor. Turn the dial clockwise to increase the sensitivity (range). Turn the dial counter-clockwise to decrease the sensitivity (range). The RANGE control should – in most cases, be set at the maximum setting. However, the sensitivity (range) may need to be set lower to avoid false triggering (small animals, cars, or nearby lighting) may require range setting to be dialed down.

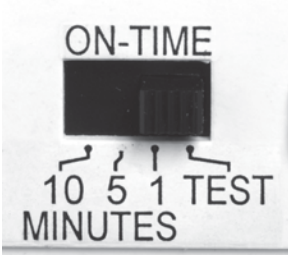

ON-TIME (Duration)

Sets how long the light will stay on after motion is detected (1, 5, or 10 minutes). Slide the ON TIME switch to the desired time duration. The TEST mode allows the motion sensor to activate during daylight.

STEP 3: SETTING THE MOTION SENSOR CONTROLS

SETTING UP OR MAKING ADJUSTMENTS TO THE MOTION SENSOR

- Turn the power OFF to the floodlight.
- Aim the motion sensor to the approximate center of the desired detection range. Caution: Do not aim the sensor above the horizon as direct sunlight may cause damage to the sensor circuitry.
- Slide the ON TIME switch to the TEST position.
- Turn the RANGE control (sensitivity dial) to the full clockwise rotation.
- Turn the power back ON to the floodlight.
- Set the RANGE of the motion sensor.
 - Have a person move around at the furthest distance of the desired detection area.
 - If the RANGE dial is at the maximum clockwise rotation and the light still has not turned on, it may be necessary to re-aim the motion sensor or the desired detection zone may be too far away. The sensor range is designed for up to 70 feet.
 - When the lights do turn on, have the person stand still until the light goes off. Once the lights are off, have the person move again to confirm the settings.
 - To reduce false triggerings, decrease the RANGE (sensitivity).
- Slide the ON TIME switch to increase or decrease the time the light stays ON after motion is detected. The setting choices are 1, 5, or 10 minutes. NOTE: When making this adjustment during daylight in test mode, the light will remain ON for the set time duration you have selected and then turn OFF. Once the light is OFF, it will not turn ON again until motion is detected.

MANUAL OVERRIDE FEATURE

If the security floodlight is connected to a wall switch, the Manual Override Feature is available. The Manual Override Feature allows the unit to be turned ON or OFF manually during the night, bypassing the motion sensor.

Manual Operation

To manually turn the floodlight ON, turn the wall switch OFF and then ON again immediately within 2 seconds. The floodlights will turn ON and remain ON until the wall switch is turned OFF. If the wall switch was previously turned OFF for a period of time, turn the wall switch ON for at least 5 seconds and then use the OFF- ON procedure above to turn the floodlight ON manually. To manually turn the floodlight OFF, simply turn the wall switch OFF. The unit will not activate as long as the wall switch is in the OFF position.

Resetting to Automatic Operation

To return the security floodlight to automatic operation, turn the wall switch OFF for at least 5 seconds and then turn the swith back ON. The security floodlight will come ON for the time duration set and then turn OFF. The floodlight will now activate according to the settings on the motion sensor. Leave the wall switch in the ON position to operate the floodlight in automatic mode.

