

Congratulations on your purchase of a Newport Coastal 'Ceiling Flushmount' lighting fixture. You have purchased a safe, dependable, and easy-to-install outdoor lighting system. You can use this fixture at home for outdoor lighting applications.

WHAT'S INCLUDED: A – Ceiling Flushmount B – Glass Shade C – Mounting Bracket w/ Ground Screw D – Finial E – Wire Connectors (2)
F – Mounting Bracket Screws (2) G – Fixture Mounting Screws H – Insulation Pad **Tools Required:** Phillips Screwdriver, Silicon Sealant or Caulk

IMPORTANT SAFETY INFORMATION

THIS PRODUCT MUST BE INSTALLED IN ACCORDANCE WITH ALL APPLICABLE INSTALLATION CODES.

- IF YOU ARE NOT FAMILIAR WITH ELECTRICAL WIRING, IT IS RECOMMENDED THAT YOU SECURE THE SERVICES OF A WELL QUALIFIED ELECTRICIAN WHO CAN ASSURE THAT THIS INSTALLATION MEETS LOCAL, STATE, AND NATIONAL CODES.
- **BE SURE POWER IS TURNED OFF AT THE MAIN POWER PANEL OR FUSE BOX PRIOR TO INSTALLATION OR REPLACING FIXTURE.**
- Before installing this fixture, be sure to check with local ordinances regarding approved outdoor lighting. This fixture style may not be allowed in some areas.
- This fixture is for outdoor use only.
- This fixture should be mounted to a grounded junction box marked for use in wet locations.
- The electrical system and the method of connecting the fixture to the system must be in accordance with local, state, and national electric codes.
- This fixture is to be connected to a 120 volt, 60 Hz power source. Connecting to a different power source may create a hazard and will void the warranty.
- This fixture is suitable for wet locations.
- Do not use near or around flammable/combustible material or liquids.
- When replacing the lamps (bulbs), use only Type A medium base lamp (bulb) – 60 Watt Maximum in each lamp (bulb) holder. Never use a lamp (bulb) with a higher wattage than the stated maximum allowed on the fixture. Using a higher wattage lamp may cause a fire hazard and/or damage to the unit. Lamps (bulbs) not included.
- The lamp (bulb) and fixture can get hot during use. Turn off the power and allow the fixture to cool down for at least 10 minutes prior to working on the unit.
- No bare wires should be exposed outside the wire connectors.
- Make certain no rough or sharp edges are in contact with any of the wires.


PRIOR TO INSTALLATION: Carefully read through the entire installation instructions before installing this security light fixture.

WARNING: BE SURE POWER IS OFF AT MAIN POWER PANEL/FUSE BOX BEFORE INSTALLING OR REPLACING FIXTURE. THIS PRODUCT MUST BE INSTALLED IN ACCORDANCE WITH THE APPLICABLE INSTALLATION CODES BY A PERSON FAMILIAR WITH THE CONSTRUCTION AND OPERATION OF THE PRODUCT AND THE HAZARDS INVOLVED.


INSTALLATION INSTRUCTIONS

BE SURE POWER IS TURNED OFF AT THE MAIN POWER PANEL OR FUSE BOX PRIOR TO INSTALLATION OR REPLACING FIXTURE.

- Remove old lighting fixture. If installing at a new location, contact a qualified electrician.
- Install Mounting Bracket (C) onto the junction box using two Mounting Bracket Screws (F). Pull the supply wires from the junction box around the Mounting Bracket (C) in preparation for wiring.
- Thread Fixture Mounting Screws (G) to Mounting Bracket (C). (You can adjust the length of the screws if necessary.)
- **WIRING – See Figure 1**
- Connect the Black wires from Ceiling Flushmount (A) to the Black wire of the supply circuit using Wire Connectors (E).
- Connect the White wires from Ceiling Flushmount (A) to the White wire of the supply circuit using Wire Connectors (E).
- Connect the Ceiling Flushmount ground wire and supply circuit ground wire to green ground screw located on Mounting Bracket (C).

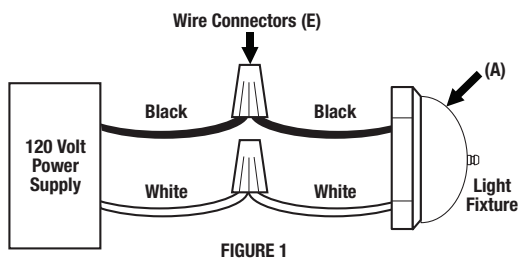

- Insert wires into junction box.
- Place foiled line Insulation Pad (H) in Ceiling Flushmount (A) fixture body with foil side facing ceiling.
- Place Ceiling Flushmount fixture body (A) over Fixture Mounting Screws (G) by inserting through fixture mounting holes. Tighten screws with screwdriver.
- Install Type A Medium Base lamps (bulbs) – not included, into socket housings. Lamp (bulb) wattage NOT to exceed 60 Watts per lamp (bulb).. See 'Installing or Replacing Lamp' Section.
- Attach Glass Shade (B) by placing onto light fixture post.
- Attach Finial (D) onto post by threading clockwise. Hand tighten securely. Do not over-tighten.
- **IMPORTANT:** Apply a weatherproof silicone caulk or sealant around the fixture base to reduce chance of water leaking into the fixture body.
- Turn ON the power.

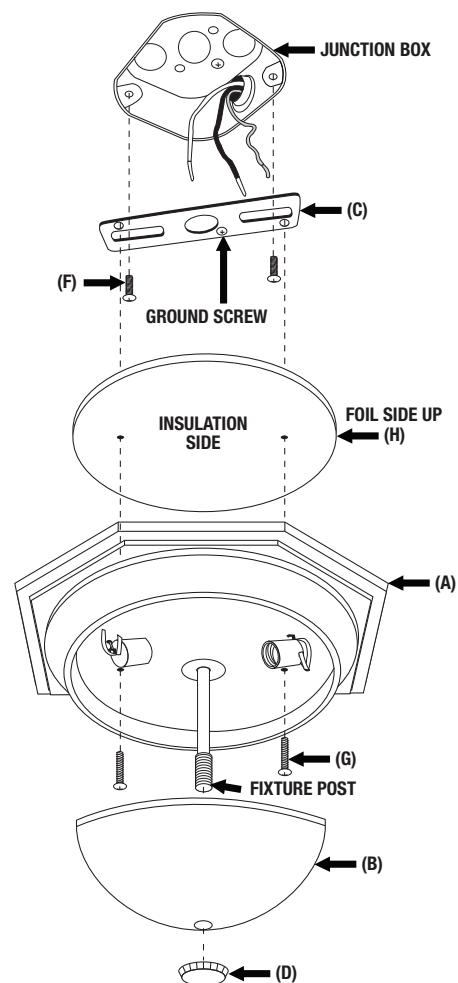

INSTALLING OR REPLACING LAMPS

- **WARNING:** Turn off the power and allow the fixture to cool down for at least 10 minutes prior to working on the unit.
- Remove Glass Shade (B) by carefully turning Finial (D) counterclockwise. **CAUTION:** Once Finial (D) is removed Glass Shade (B) will drop. Exercise extreme care to support Glass Shade to avoid breakage and injury.
- When replacing the lamp (bulb), use only a Type A Medium Base lamp (bulb) - 60 watts maximum per lamp.
- To remove existing lamp (bulb), twist lamp counterclockwise until it becomes free of fixture. Install new lamp (bulb) by turning clockwise. Do not over-tighten lamp (bulb).
- Replace Glass Shade (B) as outlined in Installation Instructions above.

TROUBLESHOOTING

Light Fixture does not turn on.

- Make sure wall switch (if applicable) is ON and that the wiring is correct.
- Check that the circuit breaker, fuse, and main circuit breaker or main power switch are ON.
- Check lamp (bulb).

LIMITED LIFETIME WARRANTY

This product is warranted to be free from defects in material and workmanship for the life of the product. If a defect in material or workmanship occurs, call 1-800-562-5625 for instructions on how to have the defective product repaired or replaced free of charge.

LIMITATIONS

- This warranty only covers Newport Coastal assembled lighting products and is not extended to other components or equipment that is used in conjunction with the product.
- This warranty is extended to original purchaser of the product. A purchase receipt or other approved proof of purchase is required before warranty service will be rendered.
- Unauthorized service or modification to this product or any furnished component will void this warranty in its entirety.
- **THIS WARRANTY IS EXPRESSLY IN LIEU OF ALL OTHER WARRANTIES, EXPRESSED OR IMPLIED, INCLUDING ANY WARRANTY, REPRESENTATION OR CONDITION OF MERCHANTABILITY OR THAT THE PRODUCTS ARE FIT FOR ANY PARTICULAR PURPOSE OR USE, AND SPECIFICALLY IN LIEU OF ALL SPECIAL, INDIRECT, INCIDENTAL, OR CONSEQUENTIAL DAMAGES (INCLUDING BUT NOT LIMITED TO ANY LOSS OF BUSINESS OR PROFITS, WHETHER OR NOT FORESEEABLE) RESULTING FROM THE USE OF THE PRODUCT OR ARISING OUT OF ANY BREACH OF THIS WARRANTY.**
- Some states or provinces do not allow the exclusion of incidental or consequential damages, so the above limitation or exclusion may not apply.
- This warranty gives you specific rights, and you may also have other rights that vary from state to state.

NOT COVERED

- Failure of product as a result of an accident, misuse, abuse, negligence, alteration, or faulty installation, or any other failure not relating to faulty material or workmanship.
- Damage caused by separately purchased replacement bulbs.
- Corrosion and discoloration of brass components.
- Reimbursement for inconvenience, installation, setup time, loss of use, or unauthorized service.