

### Features

- Program up to 6 daily events.
- Random On/Off feature turns power ON or OFF within +/- 15 minutes of programmed times.
- Manual override On/Off button
- The timer uses an internal, rechargeable battery for backup in case of power failure.
- Flip Protective Cover.

### Warning


- The unit is to be connected to a 120V, 60Hz power source only.
- Capacity: 15A,500 Tungsten (Lighting). **Do Not Exceed Capacity.**
- Do not attempt to disassemble the unit. There are no serviceable parts inside.
- The electrical system and the method of connecting this fixture to the system must be in accordance with local, state, and national electrical codes.
- If used outdoors the timer must be plugged into a weatherproof, GFCI protected receptacle.
- **THE UNIT MUST BE MOUNTED VERTICALLY WITH THE POWER CORD POINTING DOWNWARD.**
- **THE RECEPTACLE MUST BE MOUNTED AT LEAST 3 FEET ABOVE THE GROUND LEVEL.**
- **PLEASE READ THROUGH THE INSTRUCTIONS BEFORE USING.**

### Rechargeable Battery

- The timer uses an internal, rechargeable battery for backup in case of power failure.
- The timer has to be plugged in for only 5 minutes before the battery is charged enough to program the timer while it is unplugged.
- The battery backup is effective for up to 7 days after a power failure if it is fully charged.

**NOTE:** While operating on battery power, the LCD will eventually become blank, but the internal clock will still keep the time, and the program settings will be stored as long as the battery has a charge.

 FIG 1

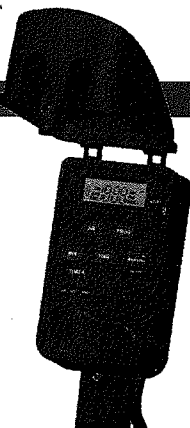

### Setting the Time

- When power is available (or batteries are installed), the display will flash "12:00 AM Sunday" (FIG 2). Press the "HR" and "MIN" (hour/minute) buttons (FIG 3) respectively to set up the correct time. Hold down the buttons for rapid increments. Once the correct time is displayed, press the "TIME" button to lock the settings.
- In order to adjust the time after initialization, press and hold the "TIME" button for one second to get in the time setting screen and repeat the above steps to set the new time.

FIG 2


 


FIG 3

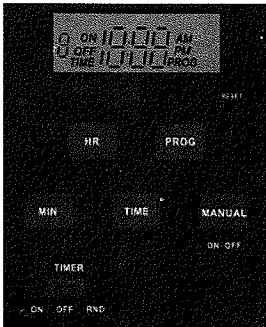 

### Timer Program Setting

- Press and hold the "PROG" button for more than 1 second or until the display starts flashing (FIG 4). Number "1" indicates that Program 1 is being set. "ON" indicates activation of timer function.
- Press the "HR" and "MIN" buttons respectively to set up the time for the timer to be TURNED ON or ACTIVATED for Program 1 as shown in FIG 4. Hold the buttons down for rapid increments.
- After setting up the activation time, press the "PROG" button again to set the time for the timer to be TURNED OFF or DEACTIVATED. The display changes from "ON" to "OFF" (FIG 5 & 6). Repeat these procedures to set up time of day for the timer to be TURNED OFF or DEACTIVATED. (For example, in FIG 5, the timer will be turned on at 6:00 PM and will be turned off at 11:30 PM.)

FIG 4


 


FIG 5

 

FIG 6



- If you would like to enter the next program, pressing the "PROG" button again will take you to Program 2. Repeat the above steps to set the time. The unit can store up to 6 programs.
- During program setting, pressing the "RESET" button once will clear the current program settings. If the "RESET" button is pressed and held for more than 3 seconds in the programming mode, ALL programs will be erased.
- To exit the programming screen, press the "TIME" button once.
- Set the "Timer Slide Switch" to the ON position in order to activate the program(s).
- After all setting has been done, snap the protective cover in place.

**NOTE:** Because six programs can be active at once, it is possible to have conflicts and/or overlapping ON/OFF commands. For example, if Program 1 turns power ON at 4 PM and OFF at 6 PM, and Program 2 turns power ON at 3 PM and OFF at 8 PM. The timer will follow the commands of both programs in sequence. The result: the power will be ON at 3 PM (Program 2) and OFF at 6 PM (Program 1).

### Master Reset

- When in the top level menu (not setting the time or programming), press and hold the "RESET" button for more than 3 seconds. After a Master Reset, all time/program settings will be erased and the unit goes back to its default settings.

### Timer Slide Switch

- The "Timer Slide Switch" is located on top of the three outlets.
- ON - Timer Program is switched to ON. Activates the programs. The unit will be turned OFF and ON according to the set programs.
- OFF - Timer Program is switched to OFF. Deactivates the programs. Does not deactivate the unit and the unit can still connect the appliance to the power source.
- RND - Random Mode. All programs will be turned ON or OFF randomly (within a +/- 15 minutes range of preset times) to make the programs seem random. As power will be turned on within a +/- 15 minute range of the preset ON and OFF times, make sure the ON and OFF times are at least 30 minutes apart.

### Manual ON/OFF Button

- The "Manual ON/OFF" button is located on the left of the top surface of the unit.
- Manually turns the power ON and OFF. If the Manual ON/OFF setting is turned ON, the unit will act as a regular wall socket. Manually turning the unit ON or OFF will not deactivate the Timer Programs. The next programmed action will override the manual setting if the "Timer Slide Switch" is set to ON.

 
### Wall Mounting the Timer:

- Make sure the timer unit is AT LEAST 3 feet above the ground when mounted

### Stake Mounting the Timer:

**WARNING:** The stake is provided as a convenience for temporary use only. Do not place the timer in a location prone to flooding or in a location exposed to landscape irrigation systems.

- Construct the 2-piece stake as shown
- Line up the tabs on stake with the four retention holes on the back of the timer.
- Place the tabs into the retention holes and push up the stake to lock them in place.
- Insert the stake in the ground until the ground surface lines up with the barrier.

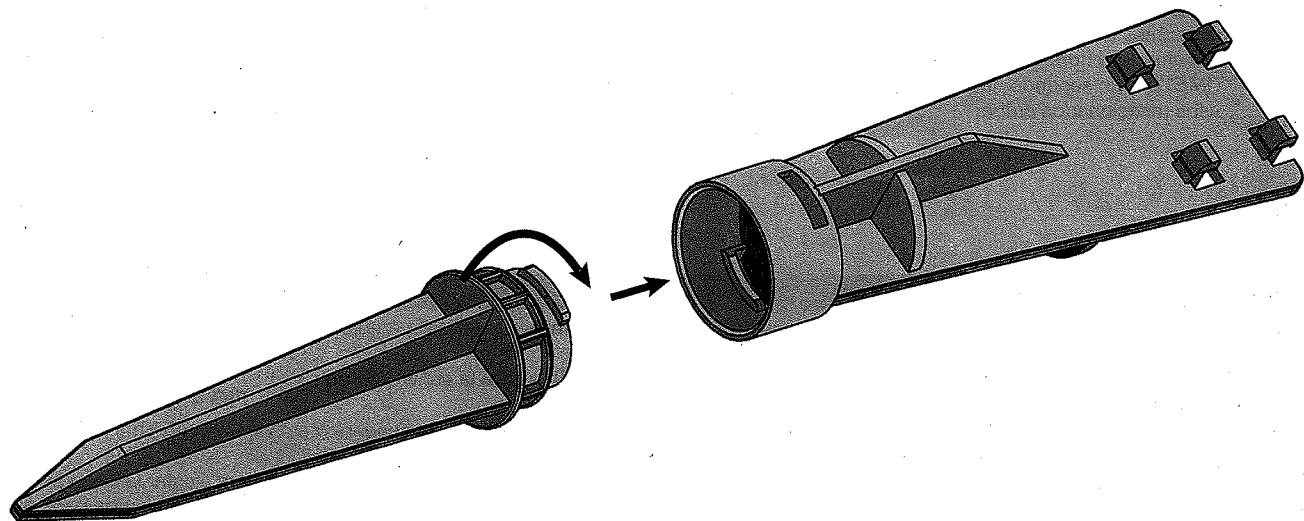

### WARRANTY

This product is warranted to be free from defects in material and workmanship for the life of the product. If a defect in material or workmanship occurs, call 1-800-562-5625 for instructions on how to have the defective product repaired or replaced free of charge.

#### LIMITATIONS

- This warranty only covers the timer unit and is not extended to other components or equipment that is used in conjunction with the product.
- This warranty is extended to the original purchaser of the product. A purchase receipt or other approved proof of purchase is required before warranty service will be rendered.
- Unauthorized service or modification to this product or any furnished component will void the warranty in its entirety.
- THIS WARRANTY IS EXPRESSLY IN LIEU OF ALL OTHER WARRANTIES, EXPRESSED OR IMPLIED, INCLUDING ANY PARTICULAR PURPOSE OR USE, AND SPECIFICALLY IN LIEU OF ALL SPECIAL, INDIRECT, INCIDENTAL, OR CONSEQUENTIAL DAMAGES (INCLUDING BUT NOT LIMITED TO ANY LOSS OF BUSINESS OR PROFITS, WHETHER OR NOT FORESEEABLE) RESULTING FROM THE USE OF THE PRODUCT OR ARISING OUT OF ANY BREACH OF THIS WARRANTY. Some states or provinces do not allow the exclusion of incidental or consequential damages, so the above limitation or exclusion may not apply.
- This warranty gives you specific rights, and you may also have other rights that vary from state to state.

#### NOT COVERED

- Failure of the product as a result of an accident, abuse, negligence, alteration, or faulty installation, or any other failure not relating to faulty material or workmanship.
- Damaged caused by electronic equipment plugged into the timer.
- Corrosion and discoloration of brass components (if any).
- Reimbursement for inconvenience, installation, setup time, loss of use, or unauthorized service.
- Special, indirect, incidental or consequential damages.