

LIMITED LIFETIME WARRANTY

This product is warranted to be free from defects in material and workmanship for the life of the product. If a defect in material or workmanship occurs, call 1-800-562-5625 for instructions on how to have the defective product repaired or replaced free of charge.

LIMITATIONS:

- This warranty only covers the assembled motion sensor.
- This warranty is extended to the original purchaser of the product.
A purchase receipt or other approved proof of purchase is required before warranty service will be rendered.
- Unauthorized service or modification to this product or any furnished component will void the warranty in its entirety.
- THIS WARRANTY IS EXPRESSLY IN LIEU OF ALL OTHER WARRANTIES, EXPRESSED OR IMPLIED, INCLUDING ANY WARRANTY, REPRESENTATION OR CONDITION OF MERCHANTABILITY OR THAT THE PRODUCTS ARE FIT FOR ANY PARTICULAR PURPOSE OR USE, AND SPECIFICALLY IN LIEU OF ALL SPECIAL, INDIRECT, INCIDENTAL, OR CONSEQUENTIAL DAMAGES (INCLUDING BUT NOT LIMITED TO ANY LOSS OF BUSINESS OR PROFITS, WHETHER OR NOT FORESEEABLE) RESULTING FROM THE USE OF THE PRODUCT OR ARISING OUT OF ANY BREACH OF THIS WARRANTY. Some states or provinces do not allow the exclusion of incidental or consequential damages, so the above limitation or exclusion may not apply.
- This warranty gives you specific rights, and you may also have other rights that vary from state to state.

NOT COVERED

- Failure of the product as a result of an accident, abuse, negligence, alteration, or faulty installation, or any other failure not relating to faulty material or workmanship.
- Reimbursement for inconvenience, installation, setup time, loss of use, or unauthorized service.



 


HAMPTON


Hampton Products International Corp.
50 Icon
Foothill Ranch, CA 92610-3000
www.hamptonproducts.com
Made in China
© 2005 Hampton Products International Corp.
REVA 05/05
999-60020

Patent Pending


INSTALLATION INSTRUCTIONS
FOR CREATaLIGHT™ MOTION SENSORS

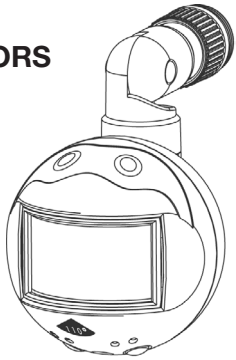

Series 7811
110° Detection Zone

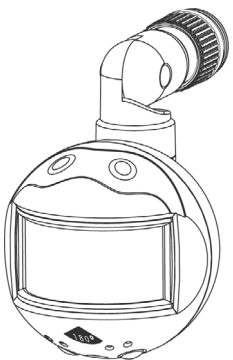 

Series 7818
180° Detection Zone

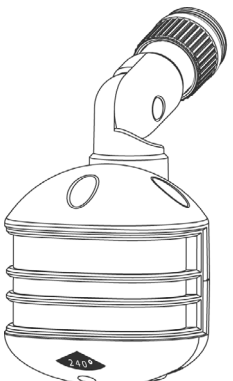 

Series 7828
240° Detection Zone

IMPORTANT SAFETY INFORMATION

- **TURN POWER OFF AT THE MAIN POWER PANEL OR FUSE BOX BEFORE INSTALLING OR REPLACING THE MOTION SENSOR OR THE FIXTURE.**
- **THIS PRODUCT MUST BE INSTALLED IN ACCORDANCE WITH ALL APPLICABLE INSTALLATION CODES BY A PERSON FAMILIAR WITH THE CONSTRUCTION AND OPERATION OF THE PRODUCT AND THE HAZARDS INVOLVED.**
- **THIS MOTION SENSOR IS DESIGNED TO BE USED ONLY WITH A CREATaLIGHT™ LIGHTING FIXTURE. ANY MODIFICATIONS OF THE UNIT MAY RESULT IN A HAZARD AND WILL VOID THE WARRANTY.**
- The CREATaLIGHT™ lighting fixture must be properly installed in accordance with local, state, and national codes. Please refer to the installation instructions supplied with the lighting fixture.
- Do not attempt to open the motion sensor housing. There are no serviceable parts inside.
- Please read through the motion sensor instructions before installing.


IMPORTANT NOTES

- Use only with light fixtures that are marked for the CREATaLIGHT™ system. Using or attaching other accessories or devices can cause a hazard or damage the unit.
- Only one CREATaLIGHT™ Accessory at a time can be attached to a CREATaLIGHT™ base.
- As a safety feature, the lighting fixture will only operate with either a CREATaLIGHT™ Accessory installed or the CREATaLIGHT™ Accessory socket cover in place.


INSTALLING THE MOTION SENSOR

INSTALLATION TIP

- If a CREATaLIGHT™ Motion Sensor is being installed in conjunction with a CREATaLIGHT™ Floodlight, it may be easier to assemble the motion sensor to the floodlight before installing the floodlight.

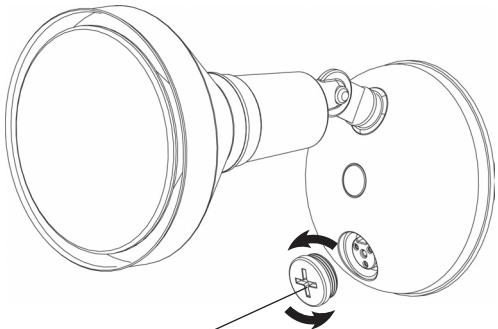

CREATaLIGHT™ ACCESSORY SOCKET COVER

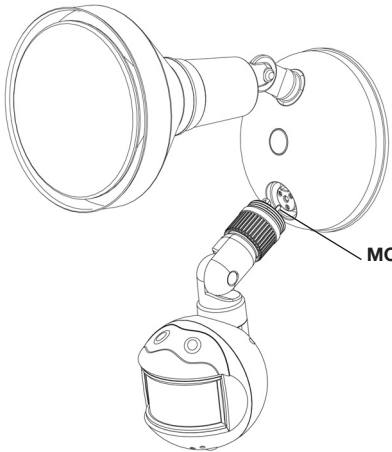

MOTION SENSOR PRONGS

INSTALLATION

IMPORTANT - TURN OFF THE POWER AT THE FUSE/BREAKER BOX.


STEP 1: Remove the CREATaLIGHT™ Accessory socket cover by unscrewing it counterclockwise. Please keep the socket cover for future use should the motion sensor be removed.

STEP 2: Insert the motion sensor into the socket by aligning the motion sensor prongs with the socket. Be sure that the sensor prongs are properly seated.

INSTALLING THE MOTION SENSOR

Continued from Page 1

STEP 3: Rotate the motion sensor locking ring clockwise until snug. Do not over tighten.

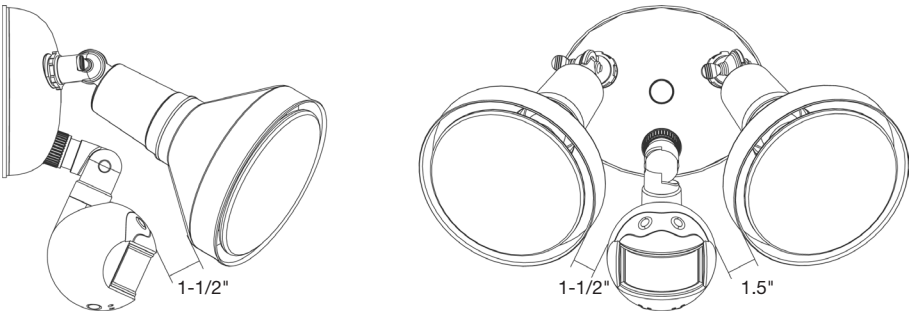

STEP 4: Aim the motion sensor at the center of the desired detection area. Be sure to space the motion sensor at least 1-1/2" from the lamp head(s).

STEP 5: Turn the power back on at the main power panel.


ADJUSTING THE MOTION SENSOR CONTROLS

TIME:
Sets how long the light will stay on after the last motion is detected.


SENSITIVITY (SENS):
Sets sensitivity of the motion sensor. Generally, the sensitivity should be set at maximum. Lower the sensitivity to reduce false triggering caused by small animals.

After the motion sensor has been installed and power is turned on, press the Time button and the Sensitivity (SENS) button until the combination of LED lights that are lit corresponds with the desired settings. (Please see table below)

	GREEN ONLY	GREEN AND RED	RED ONLY
TIME	30 SECONDS	1 MINUTES	3 MINUTES
SENSITIVITY (SENS)	10 FEET 3 METERS	25 FEET 7 METERS	40 FEET 12 METERS

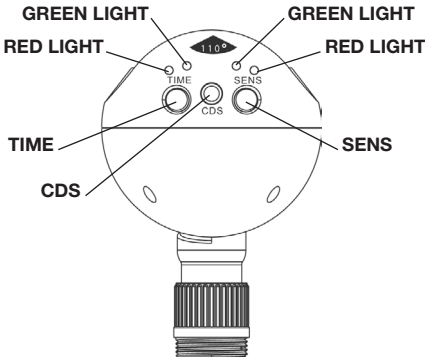


Series 7811
Series 7818

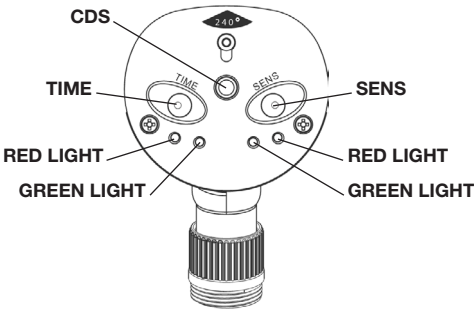

Series 7828

IMPORTANT NOTE:
To prevent damage during shipment, the photocell (located at the bottom of the motion sensor) is protected with a cover/sticker labeled as **CDS**. With the **CDS** sticker in place, the motion sensor's function and setting can be checked during the daytime. In order for the motion sensor to work properly as intended, the **CDS** sticker must be removed.

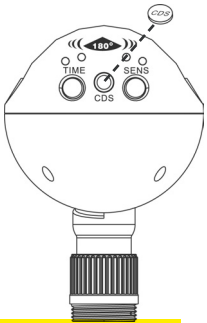


MANUAL OVERRIDE FEATURE

The Manual Override Feature allows the unit to be turned ON or OFF manually, bypassing the motion sensor.


NOTE:
The Manual Override Feature is only available if the lighting fixture is connected to a wall switch. The Manual Override Feature only works at night.

MANUAL OVERRIDE:
To manually turn the unit ON, turn the wall switch OFF for 2 seconds and then ON again. The floodlight will turn ON and remain ON until the wall switch is turned OFF. If the light is left ON in the Manual Override mode through the night, the unit will automatically turn OFF when daylight is detected and will reset to Automatic Operation.


RESETTING TO AUTOMATIC OPERATION:
To return the security light to automatic operation, turn the wall switch OFF and then back ON within 1 second. The floodlight will turn off and stay off until motion is detected. Leave the wall switch in the ON position to operate in automatic mode.

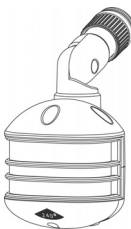

Motion Sensor – 110°, 180°, or 240°

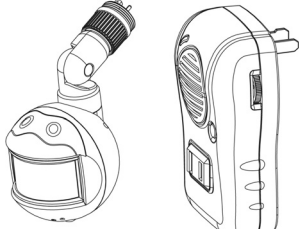

Motion Sensor/Transmitter – With Indoor Alarm

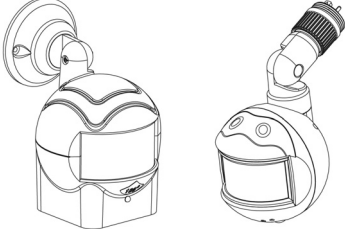


Motion Sensor/Transmitter – With Remote Sensor

Optional CREATaLIGHT™ Accessories

Please contact your local CREATaLIGHT™ retailer for product availability.

- 110 Degree Detection Zone Motion Sensor – With integrated photocell (Series 7811)
- 180 Degree Detection Zone Motion Sensor – With integrated photocell (Series 7818)
- 240 Degree Detection Zone Motion Sensor – With integrated photocell (Series 7828)
- 180 Degree Detection Zone Motion Sensor/Transmitter – With Indoor Alarm (Series 7938)
- 180 Degree Detection Zone Remote Motion Sensor – With transmitter to activate another fixture within 100 feet (Series 7948)

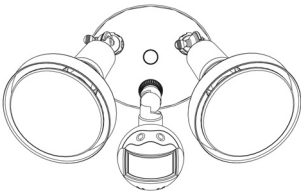

QUESTIONS

For further assistance or for more information, please call 1-800-562-5625, 8 am – 5 pm (Pacific Time), Monday – Friday